

***SLIDING-NUMBER LOCK WITH
1,000,000 GENUINE LOCKING COMBINATIONS***

**Operating instructions
for sliding-number lock C4000**

TO OPEN THE SAFE

All safes with a numerical code supplied set to the combination 1 – 2 – 3 – 4 – 5 – 6. With this factory setting, you can open the safe to the right after approximately one full turn of the bolt wheel (position green). During the second half of the turn, the combination is automatically deleted, so that the numbers are not visible when the safe is open.

TO CLOSE THE SAFE

After turning the bolt wheel half a turn, close the safe to the left. Careful, without resetting the combination, the safe may be opened again (position yellow).

TO SECURE THE SAFE

If it has to be possible to open the safe by entering the numerical code only, it has to be locked by turning the bolt wheel approximately one full turn to the left (position red).


TO CHANGE THE COMBINATION

Make sure the door is open and blocked. Re-enter the old number (the automatic resetting device has meanwhile set all numbers to zero) and turn back the bolt wheel to the right half a turn (position yellow). Enter the new numbers of your choice as follows:

Enter the enclosed screwdriver into one of the small slots in the panel on the inside of the door and turn the screw inside the slot 9 turns to left. Set the associated slide selector on the front of the door to the new number and retighten the screw to the right. Repeat this procedure to select the other five new numbers.

PRACTICE CHANGING THE COMBINATION WITH THE DOOR OPEN AND DO NOT USE PERSONAL DATA (e.g. birthday).

Once the numerical code is lost or forgotten, it is not possible to open the safe.

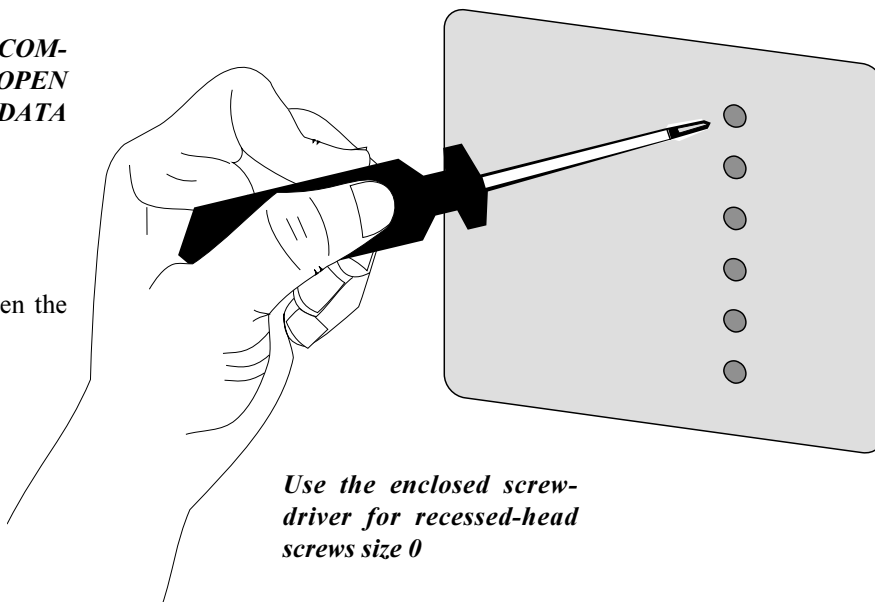

Use the enclosed screwdriver for recessed-head screws size 0